

The easiest installation in the industry.

INSTALLATION

With acoustic panels from I-Wood Denmark®, you get the industry's easiest installation. All panels are created with focus on ensuring simple installation for both DIYers and professionals. Perfect joints, a perfect finish and the perfect way to invite Nordic nature into your home. With our patented I-Lock® Click System and its 5G technology, installation is just a single 'click' away.

VIDEO

Scan the QR codes:



INSTALLING A CEILING - PRO+ I-LOCK® (video)

i-wooddenmark.com/engineering/installation/installing-a-ceiling



INSTALLING A WALL (video)

i-wooddenmark.com/engineering/installation/installing-a-wall



INSTALLING A WALL INCL. BATTEN BOARD/INSULATION (video)

i-wooddenmark.com/engineering/installation/installing-a-wall

NATURAL MATERIALS

An I-Wood Denmark® panel is a natural product in the best and most classic sense of the word. Sorting will therefore always be reflected in the natural character of the wood. Each piece of wood has its own expression and unique grain. Therefore, you can expect variation in the colour and expression of the wood. Our pictures are indicative.


MAINTENANCE

I-Wood Denmark® products require minimal maintenance, as they are natural products. We simply recommend dusting the products as needed. Natural products can over time vary in expression and colour depending on the individual product and environment.

TEMPERATURE

I-Wood Denmark® ceiling and wall panels must be stored in a dry and warm place. This will ensure a safe, consistent humidity level of approx. 4-10%. The room where your new wood panels are to be installed must also be dry and warm – and heated to approx. 17-21 degrees. We recommend a humidity level of about 30-60%.

INSTALLING - FASTENING WITH BRAD NAILS

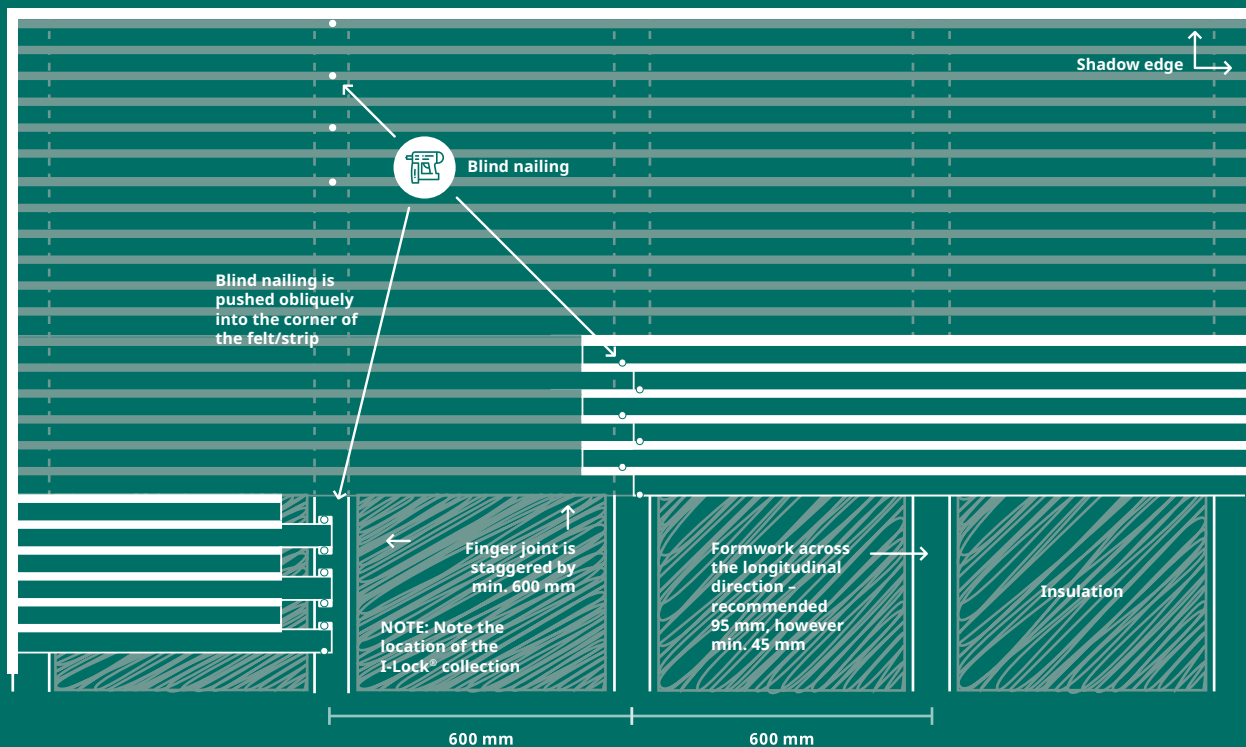


IMPORTANT

- The outermost part of the I-Block® joint must be placed centrally over the batten board.
- After connecting the I-Block®, check the felt joint between the two panels.
- Before fitting I-Wood®, it is a good idea to sort the colours of your panels, since wood is a natural material and colour differences will occur.

INSTALLING - FASTENING WITH ADHESIVE

We recommend using I-Wood Denmark® Fitting Glue.

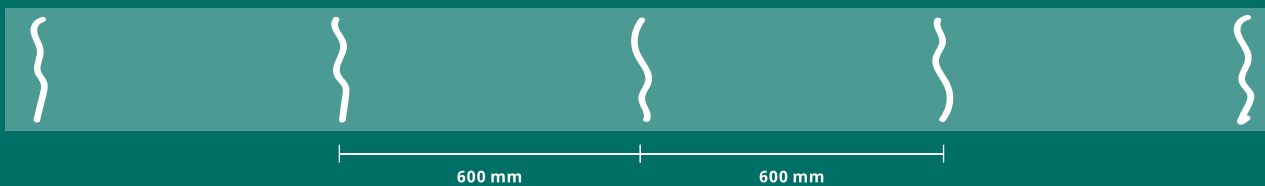

SHADOW EDGE

Create a shadow edge from our filter rolls (1.5 x 100 mm) and attach it to the batten board before installing. We always recommend using batten board around all the walls of the room by omitting the outer batten board sideways and making room for batten board at the end of the room (min. 22 x 45 mm). Mount the batten board with felt together with the ceiling panels, so that all wall surfaces can be covered in one process.

You can also make shadow edges from a solid felt strip of 3 x 31 mm. These can be installed after the batten board has been installed in connection with ceiling installation. Please be aware that the shadow edge only covers 3 mm down the wall.

REPAIRS - OIL

With I-Wood Denmark® repair oil, you can treat minor damage to the surface, such as superficial scratches or discolouration. The oil is an optional extra and is a small amount of the original oil your wood panels are treated with.