



Create an elegant, open room divider with DivideWall from I-Wood Denmark®. Follow the steps below to install the bottom profile, top profile and lamellas correctly.

Tools required

- Spirit level
- Power drill/driver
- Handsaw or other suitable saw
- Caulking gun and construction adhesive
- Tape measure and pencil



Secure the bottom profile

1

Position the bottom profile on the floor. Check that it is straight. Fix it directly to the floor using construction adhesive.

IMPORTANT

The bottom profile may also be screwed down if required by the substrate.



Secure the top profile

2

Install the top profile directly above the bottom profile. Use a tape measure and spirit level to ensure that the profiles are aligned.

IMPORTANT

Secure the top profile on both sides with screws at approximately every third recess.



Measure the lamellas

3


Measure from the bottom of the top-profile recess to the bottom of the bottom-profile recess. Subtract 8 mm. The result is the required lamella length.

IMPORTANT

The 8 mm clearance allows the lamella to be raised into the top profile and lowered into the bottom profile.



Watch the installation video on YouTube
youtube.com/@iwooddenmark

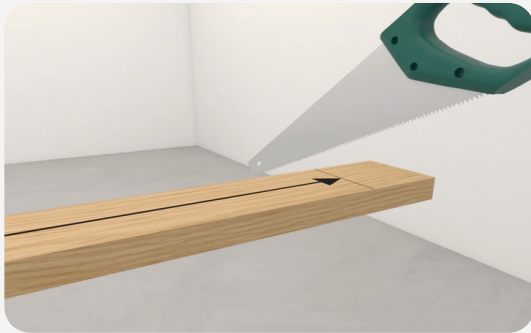

Cut the lamellas to length

4

Mark the required length on the lamella with a pencil. Cut the lamella with a handsaw or another suitable saw, ensuring that the cut is clean and straight.

IMPORTANT

Measure each lamella individually if the floor or ceiling is not completely level.




Install the lamellas

5

First insert the lamella into the recess in the top profile. Then carefully lower the lamella into the recess in the bottom profile.

IMPORTANT

Repeat the process until all the lamellas have been installed.

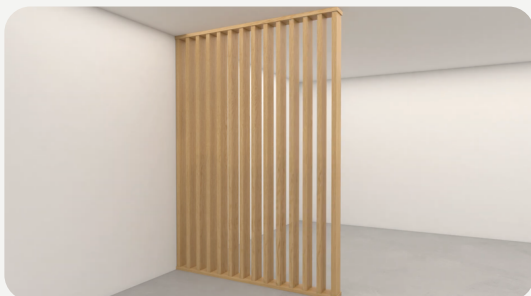

Check the finished installation

6

- The top and bottom profiles are aligned
- The lamellas are vertical
- All lamellas are correctly seated in the recesses
- Wipe down the surfaces as required

Important installation notes

- Use screws and plugs suitable for the ceiling and floor materials.
- Check that the top and bottom profiles are aligned before installing the lamellas.
- For uneven floors or ceilings, measure each lamella individually.
- Wood is a natural material. Variations in colour, texture and grain may occur.



Product information

Angle 90 top/bottom profile: 31 × 110 × 740 / 1340 / 1940 / 2540 mm. Angle 45: 31 × 110 × 810 / 1410 / 2010 / 2610 mm.

Lamella profile: 31 × 100 × 3000 mm. Top recess: 15 mm. Bottom recess: 5 mm.



Watch the installation video on YouTube
youtube.com/@iwooddenmark